

FIG. 1

REMOTE MANAGEMENT CONSOLE

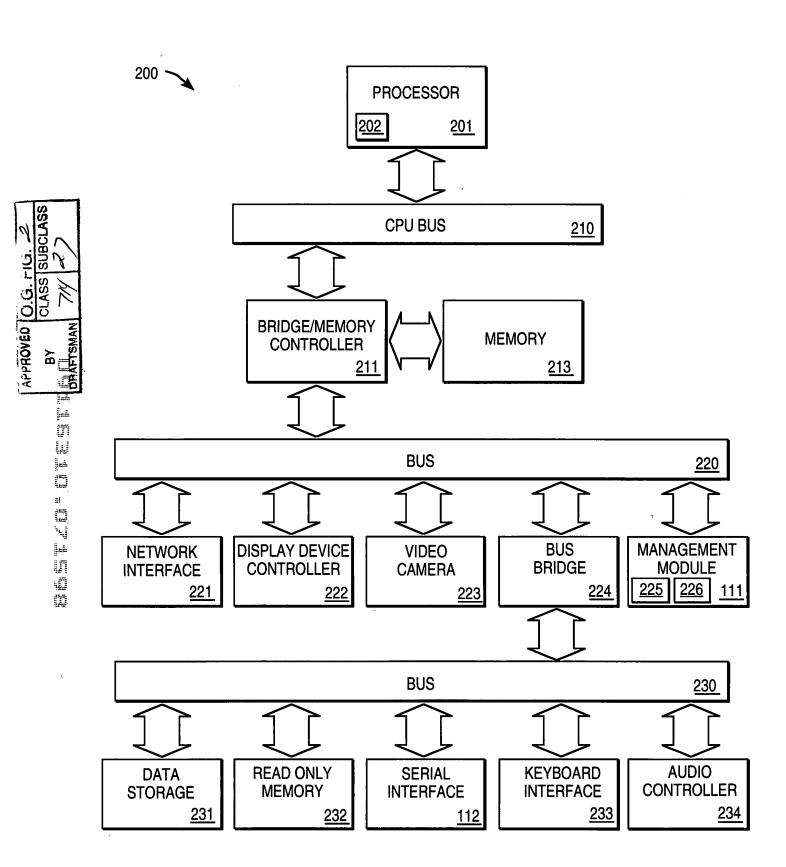


FIG. 2

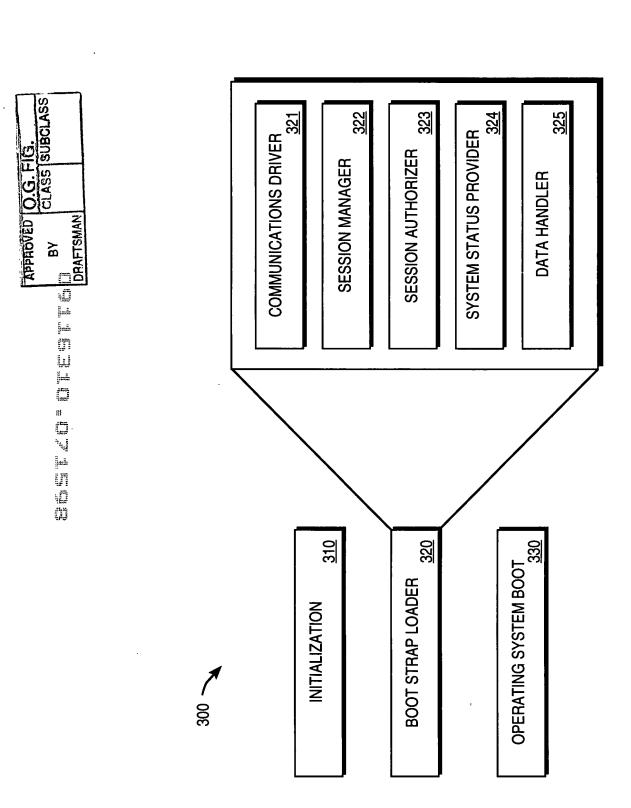


FIG. 3

CHENTER OF THE THE THE THE THE COLUMN CLASS SUBCLASS DRAFTSMAN

CONNECTION INITIATOR <u>410</u> **SESSION INITIATOR** <u>420</u> SYSTEM INTERROGATOR <u>430</u> **DATA LOADER** <u>440</u> **EXECUTION** <u>450</u> <u>400</u>

FIG. 4

APPROVED O.G. FIG.

By CLASS SUBCLASS

BY CLASS SUBCLASS

DIAGNOSTIC ENVIRONMENT LOADER 510

TEST RUN TIME ENVIRONMENT 520

TEST CONTROL AGENT 530

DIAGNOSTIC TESTS 540

FIG. 5



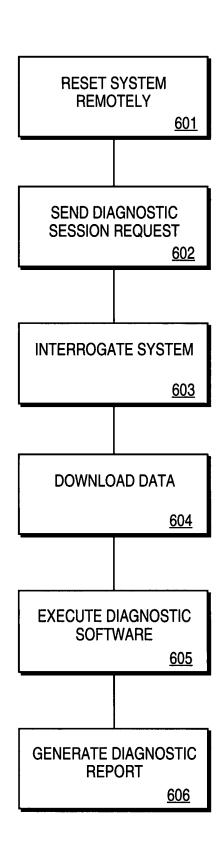


FIG. 6

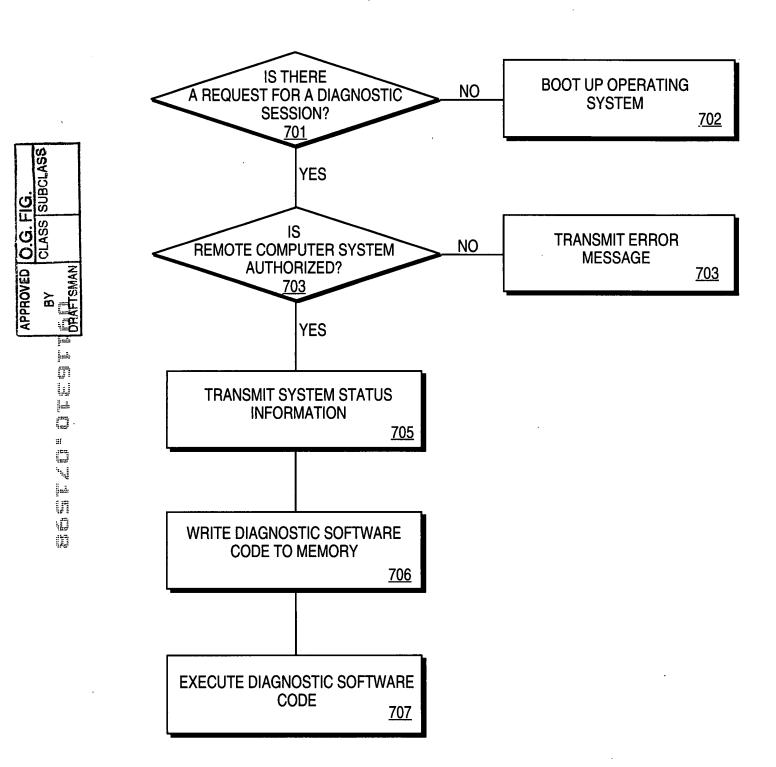


FIG. 7